


COREPLU800-5

ASSEMBLY INSTRUCTION

- 0.8m wide x 2m long x 5m high
- 4m platform height
- 6m reach height
- 450kg load rating

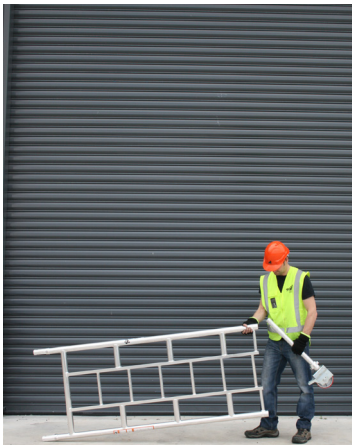


1

Insert adjustable wheels into ladder frame and 4 rung frame. These are secured in place by an internal spring clip.




2

Snap green brace as low as possible on vertical frame piece. Ensure the claw faces outwards to make it self-supporting.

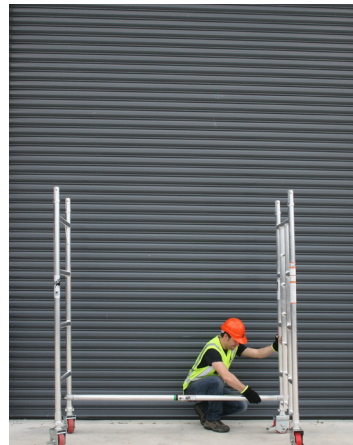

3

Repeat step 2 with another green brace and frame, ensuring the claw faces out. Square up base and lock all wheels.

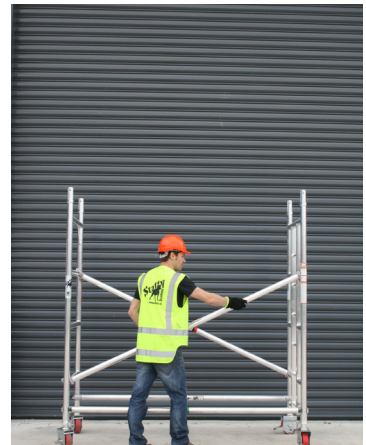

4

Snap two red braces in a cross on the back and one red brace at the front face of scaffold from rung 1 to opposing rung 3.



5

Place platform onto rung 2 with the hatch on the ladder side.




6

Ensure that the setup is level across the width and length of the scaffold. Adjust wheels accordingly (adjustable to 400mm).



7

Snap two horizontals on rung 4 on either side of the platform to make a temporary handrail.

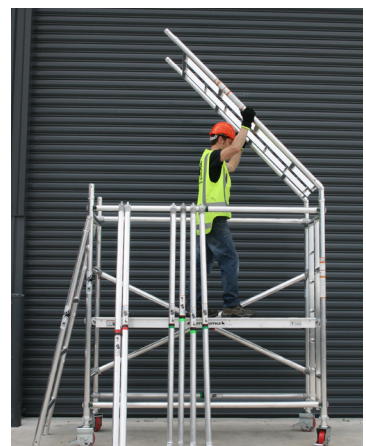

8

Lean frames and braces against tower. Install frames onto connecting spigots, secure with spring clip. Line up ladder frames.




9

Snap two braces onto frame facing outwards on the front and back of the tower above rung 5 and 6. This acts as a temporary handrail when platform moves up.



10

Snap two red braces in a cross from rungs 5 to 7 at the back and another two red braces in the same pattern to the front.

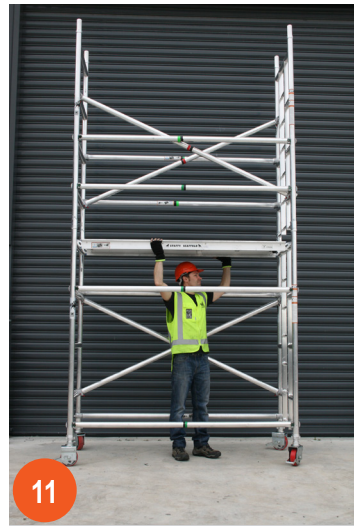

11

Move platform up to rung 4. It is now safe to access this platform.



12

Attach 2 outriggers to outside corners. Calculate distance of toe from the tower using the 1:3 ratio (width:height). Retract and extend the toe of the outrigger when moving, no need to detach outrigger.



13

Snap four green braces to top rung with claw facing outwards (Two either side of ladder).



14

Access platform and safely place the two handrail frames on the connecting spigots of frames below. Secure with four spring clips.



15

Place the platform on rung 8 (4m high), ensuring trapdoor is over the ladder. Secure platform by sliding out platform hook.



16

Sit on platform with legs secured on ladder through trapdoor, snap green braces with claw outwards on handrail frame...



17

... above top 2 rungs. Start at front of tower at the furthest point. Continue at back or leave those off if set-up against a façade.



18

Install toe boards on all work platforms



19

Stand proud, you are safe, you are on a Staffy!

To dismantle, simply follow the steps in reverse, but do not walk backwards.

For more info on how to assemble any of our products, please visit our website or contact our friendly team.